

Installation Instructions of Body Side Moldings

**Lifetime
Warranty**


Kit Includes:
(4) Molding Pieces
(2) Alcohol Pads
(1) Adhesive Promoter Pad

Tools Required:
3/4" Masking Tape
Measuring Tape
Soft Cloth Rag
General Purpose Wax & Grease Remover

Important: Always test fit part before peeling red liner from adhesive.

Step 1.

Most moldings are installed at the apex or the crown of the doors (the part of the door that sticks out the farthest). Some vehicles will have an extruded body line and this would be the apex of the door.

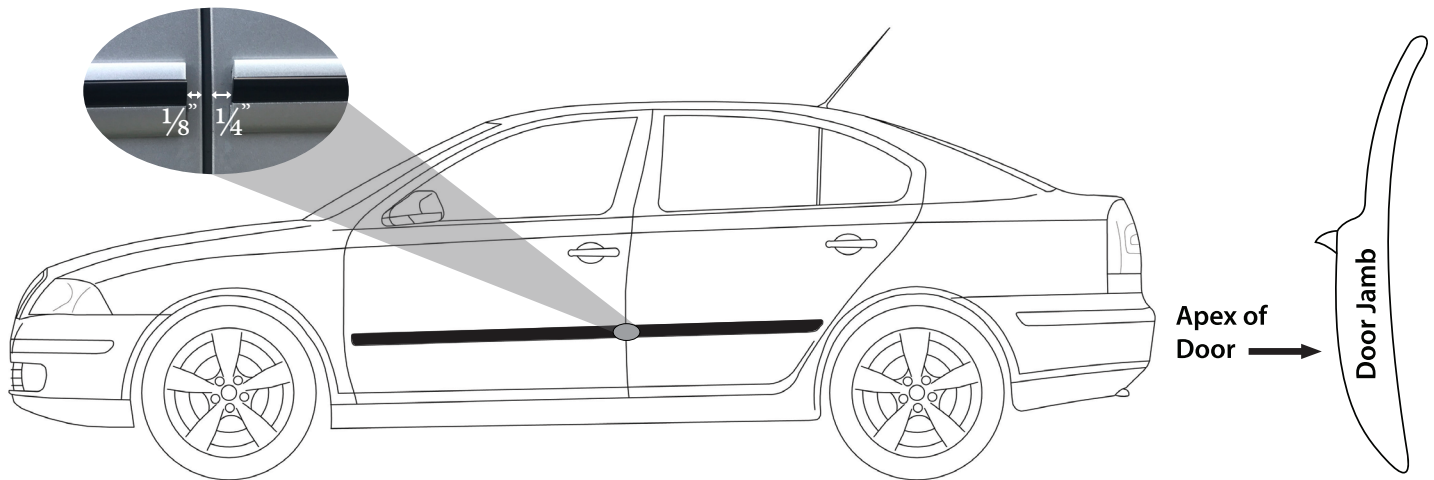

Step 2.

If the vehicle has wax on the surface where the molding is to be applied, the wax will need to be removed using a general purpose wax and grease remover. Next, clean the surface where the moldings are to be applied with the supplied alcohol wipes. Go back over the surface with a clean cloth to remove and residue. Apply the supplied adhesive promoter to the surface where the molding will be installed.

Step 3.

Using 3/4" masking tape, set a straight guideline right above where the molding is to be installed on the apex of the door. Peel back 12" of the red liner tape on the top and bottom on the backside of the molding. Apply the molding using the bottom edge of the masking tape as your guide and peel the rest of the red liner as you install the molding.

Step 4.

Use a clean, soft cloth and apply even pressure along the entire length of the molding to ensure proper adhesion. Remove the masking tape and you will have installed an OEM style body side molding for years of protection.